


What's in the Box

Your package includes the following items:

- Mobile phone
- Battery
- Charger
- USB cable
- Headset
- Quick start guide
- Safety Information

Phone at a Glance

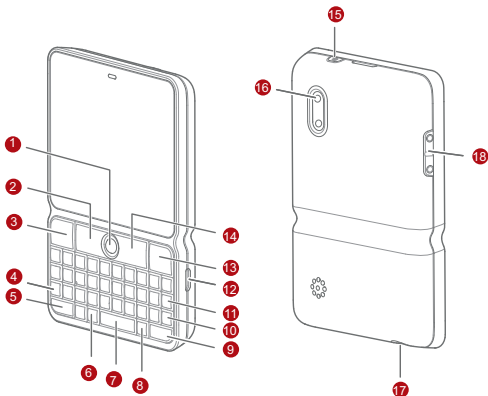

1	 Track ball	2	 MENU key
3	 Send key	4	 Alternate key
5	 Shift key	6	 Flashlight key
7	 Space key	8	 Search key
9	 Symbol key	10	 Enter key
11	 Clear key	12	Charging/Data port
13	 End key	14	 Back key
15	 Power key	16	Camera lens
17	Headset jack	18	Volume keys

Key functions at your fingertips

- Press to power on your mobile phone.
- ① • Press and hold to open the **Phone options** menu.
- Press to lock the screen when your mobile phone is on.

 Press to go to the **Call log** screen.

 Press to open the menu on an active screen.

-  • Roll to navigate through selectable items on the screen.
- Press to select a highlighted item or action.



Press this key first to type the upper character on any key.



- Press to return to the previous screen.
 - Press to exit the application you are running.
 - If onscreen keyboard displayed, press this key to hide the onscreen keyboard.
-



Press to insert a space.



Press to active search interface.




- Press to hang up a call.
 - Press to return to the Home screen.
-


Getting Started with Your Mobile Phone

Installing the SIM Card


1

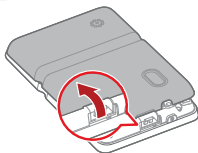


2

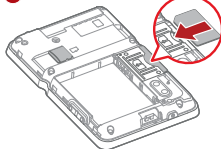

Installing the microSD Card

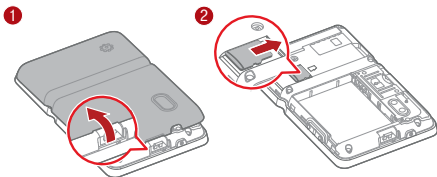


Installing the Battery

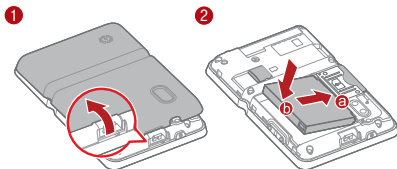

Charging Your Mobile Phone

Before charging the battery, make sure that the battery has been properly inserted into your mobile phone.

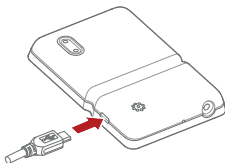

1. Connect your USB cable to your mobile phone.
2. Connect the other end of the cable to the charger.

3. Plug the charger into an electrical outlet.

Powering on Your Mobile Phone

Press the  to power on the mobile phone.

The first time you do this, you will be asked to sign in to your account and set up your mobile phone. Please note you can skip this step to continue to set up your mobile phone.

Powering off Your Mobile Phone

1. Press and hold  to open the **Phone options** menu.
2. Touch **Power off**.
3. Touch **OK**.

Touchscreen Actions

- **Touch:** Use the pressure of your fingertip or stylus to select an item, confirm a selection, or start an application.
- **Touch and hold:** Use the pressure of your fingertip or stylus to select an item and continue to press until your mobile phone responds. For example, you can touch and hold an empty area of the screen to open the options menu of the active screen.
- **Flick:** Move your fingertip or stylus either vertically or horizontally across the screen. For example, you can flick left and right to switch between pictures.
- **Drag:** Touch and hold the desired item, Then, you will be able to drag the item anywhere you desire on the screen. For example, you can drag an icon on the screen to move or delete it.


Calibrating the screen

Calibrate the screen if it does not respond accurately to touch.

1. On the **Settings** screen, touch **Sound & display > Calibration**.
2. Touch the target on the screen.
3. After the calibration process, press  to quit.

Home Screen


The Home screen allows you to put all the items you need in one place.

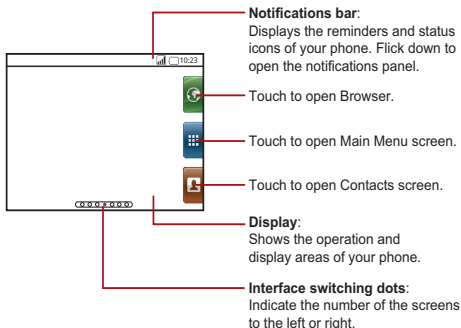

Locking the Screen

- When your mobile phone is on, press **①** to lock the screen. While the screen is locked, you can still receive messages and calls.
- If you leave your mobile phone undisturbed for a while (based on your settings), the screen will lock automatically.

Unlocking the Screen

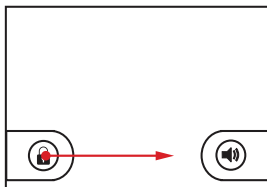

1. Press , , , , or  to wake up the screen.
2. Drag the lock icon to the right. The last screen you were on opens.

Adding a New Screen Item

1. Touch and hold the blank area on the Home screen until the **Add to Home screen** menu is displayed.
2. Select an item to add it to the Home screen.

Importing Contacts from a SIM Card

1. Once you are in the contacts list, press , and then touch **More > Manage contacts**.
2. Touch **Copy from SIM card**. Wait for the SIM card contents to be loaded.
3. Select the check box of the contact you want to import.
Touch **Deselect all** or **Select all**.
4. Touch **Copy**.
5. If you have more than one account on your phone, touch the account into which you want to import the contacts.

Adding a Contact

1. Once you are in the contacts list, press , and then touch **Create contact**.
2. If you have more than one account with contacts, touch the account to which you want to add the contact.
3. Enter the contact's name, and then add any detailed information such as phone number or address.
4. When you are finished, touch **Done** to save the contact information.

Making a Call

To make a call, you can use the **Dialer** application, or select a number from **Contacts** or **Call log**.


When you are on a call, you can press  to return to the Home screen and use other functions. To return to the calling screen, flick the notification bar down and touch **Current call**.

Making a Call with the Dialer

1. Touch  > **Dialer** to display the dialer.
2. Touch the appropriate numeric keys to enter the phone number.
3. Press  to initiate the call.


Answering an Incoming Call

- Press  to answer the call.
- Drag the  to the right.

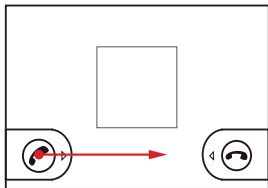

Rejecting an Incoming Call


- Press  to reject a call.
- Drag the  to the left.

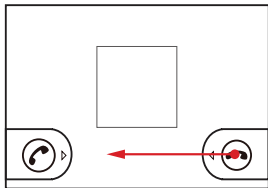

Using the Phone Keyboard

■ **Note:** The following operations are only applicable to Huawei IME input method.

Press , , and  to switch input modes and languages. In different input modes, the cursor is displayed in different forms, as shown in the following figures.




Cursor: Y

- To enter **one** upper character of a key, press  first, and then select a key.

Cursor: Y

- To enter **only** the upper characters of a key, press  twice, and then select a key. Press again to change back.




Cursor: ▴

- To enter **one** capital letter, press  first, and then select a key.

Cursor: ▴

- To enter **only** capital letters, press  twice, and then select a key. Press again to change back.



- To switch the input language, press  + , current language will display on the notification bar.

Choosing an Input Method

1. On the text screen, touch and hold the space where you usually write your text until the **Edit text** menu is displayed.
2. Touch **Input method**.
3. Select the input method.

Creating and Sending a Multimedia Message

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number in the **To** field, or touch + to select a contact from **Contacts**.
3. Touch the composition text box to start entering your message.
4. Press  to display the options panel.
 - Touch **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.
 - Touch **Attach** to add a picture, music, or video file.
5. When the message is ready to be sent, touch **Send**.

Turning on the Data Service

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**.
3. Select the **Data Service** check box to turn on the data connection.

Turning On Wi-Fi

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on Wi-Fi.

Sharing Your Phone's Data Connection as a Portable Wi-Fi Hotspot

1. On the Home screen, touch  > **Wireless Tether**.
2. Touch  to share your data connection.

Opening the Browser

On the Home screen, touch  to open the browser.

Using the microSD Card as USB Mass Storage

To transfer all your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as the USB mass storage.

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the microSD card as a removable disk.
2. Open the notification panel on your phone, and then touch **USB connected**.
3. Scroll down the screen, and then touch **Mount** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

Changing the Wallpaper

1. On the Home screen, press  > **Wallpaper**.
2. In the options menu, select a picture application.
3. Select the wallpaper you want to use.

Changing the Phone Ringtone

1. On the **Settings** screen, touch **Sound & display** > **Phone ringtone**.
2. Touch the ringtone you want to use, and then touch **OK**. The ringtone plays when selected.

Changing the Message Ringtone

1. On the Home screen, touch  > **Messaging**.
2. Press , and then touch **Settings** > **Select ringtone**.

3. Select the ringtone in the list and then touch **OK**.


Opening Your Camera

- Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or shoot a video.
- Press  on the picture capture screen to close the camera.

Taking a Photo

1. Open your camera and switch to the camera mode.
2. If necessary, open the settings panel to change the camera settings. The preview changes as you change the settings.
3. Compose your photo within the photo capture screen.
4. Touch and hold . When the frame turns green, the image is in focus.
5. Release  to take your photo.

The photo you just took is displayed for a moment. You can take another photo or preview your photos.

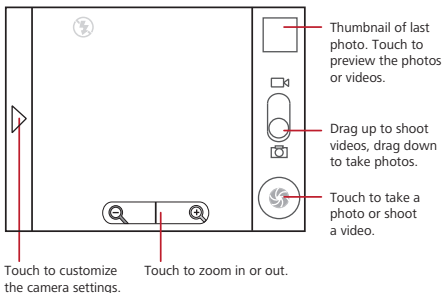

Recording a Video

1. Open the camera, and then switch to camcorder mode.

2. If necessary, open the settings panel to change the camcorder settings.
3. Frame the scene which you want to start your video.
4. Touch  to start recording a video. The camcorder starts shooting the video.
5. Touch  to stop shooting. You can shoot another video or preview your videos.

Enjoying Music

You can copy music files to your microSD card. When you listen to the music using the **Music** application, it will search for music on the microSD card. After the search is complete, you will be able to view all available music files in the music library.

Opening the Media Library

Touch  > **Music** to display the media library.

Using Market

Android Market provides direct access to applications and games which you can download and install on your phone.

Downloading and installing an application

■ Note:

If you want to install a non-Market application, touch  > **Settings** > **Applications**, and then select the **Unknown sources** check box to allow installation of the non-Market application.

1. Touch **Install** (if the item is free) or **Buy**, whichever is displayed.
2. After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.
3. You can find the application icon on the main menu screen.

■ Note:

Availability of Google applications, services, and features may vary according to your country or carrier. Please follow the local laws and regulations to use them.

Restoring Factory Data

If you reset your phone to the settings that were configured at the factory, **all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications will be erased.**

Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos.

1. On the **Settings** screen, touch **Privacy > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

FAQ

How do I disable the function of automatic orientation switching when rotating the phone?

Touch **Settings > Sound & display > Orientation** to disable the function.

How do I change the keyboard mode?

Touch and hold the area where you write text and then select the input method you prefer.

How do I stop the song playing in the background?

Touch the notification bar, flick downwards to open the notifications panel, and then touch the music playing notification to go to the music playing screen.

How do I return to the calling screen?

If you are on another screen during a call, you can open the notifications panel and select the current call notification, or simply press  to return to the calling screen.

How do I create an application shortcut on the Home screen?

Touch and hold an application icon on the main menu screen until the Home screen is displayed. Then drag the icon where you want it to go and release your finger.

How do I hide the onscreen keyboard?

Press  to hide the onscreen keyboard.

How do I forward a message?

Touch and hold a message in a message window until a menu opens. Then touch **Forward** in the menu that opens.

How do I improve the GPS performance?

You can touch  > **Settings** > **Location & security** > **Use assisted GPS** to effectively improve the GPS performance. Note that your mobile phone time must be consistent with your local time, so that the A-GPS function will run properly.

Important Safety Information

Operating Environment

- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in

laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.494 W/kg, and when properly worn on the body is 0.639 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.813 W/kg, and when properly worn on the body is 0.844 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Caution

Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate

this device.

Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site

www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site

www.huaweidevice.com/certification.

CE0197

■ Note:

Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

■ Note:

This device may be operated in all member states of the EU.

France: Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

Italy: For private use, a general authorisation is required if WAS/RLAN's are used outside own premises. For public use, a general authorisation is required.

Luxembourg: General authorisation required for network and service supply.

Norway: This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



, and **HUAWEI** are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks and product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

Huawei Technologies Co., Ltd. is not responsible for the legitimacy and quality of any products that you upload or download through this mobile phone, including but not limited to the text, pictures, music, movies, and non-built-in software with copyright protection. Any consequences arising from the installation or usage of the preceding products on this mobile phone shall be borne by yourself.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.